



# FIRE.IT Installation Manual

## Box Contents

- (1) 5V Type C USB Cable
- (2) Power Supply
- (3) One Touch
- (4) Wall bracket and Desktop bracket

## Features

- Works with most major fireplace manufacturers remote controls
- Communicates with FIRE.IT App using bluetooth or WiFi
- Set your room temperature to operate control your fireplace
- Scheduling and timers
- Easy installation with wall bracket and desktop bracket

## Specifications

### Environmental

Location Indoor Use

### Dimensions

	Height	Length	Depth
Module	5 <sup>1</sup> / <sub>8</sub> (13.0 cm)	3 <sup>5</sup> / <sub>32</sub> (8.0 cm)	<sup>63</sup> / <sub>64</sub> (2.5 cm)
Shipping	6 <sup>29</sup> / <sub>64</sub> (16.4 cm)	4 <sup>27</sup> / <sub>32</sub> (12.3 cm)	1 <sup>29</sup> / <sub>64</sub> (3.7 cm)

### Power

Power Supply 5V

## Installation

1. Plug the touch screen to a power socket and pair your remote control to the touch screen hub using the FIRE.IT app to ensure your fireplace can turn on and off from the position of the touch screen hub
2. Locate the position of the mounting bracket and make sure it is level with the spirit level provided
3. Cut a hole into the wall to run the 5v type c USB cable
4. Fasten the two screws provided to the bracket.
5. Connect the type C usb cable to the touch screen
6. Install the touch screen onto the bracket
7. Please make sure you connect the USB cable to the power supply provided
8. The power supply can connect to any standard house hold power socket

## Warranty

2 years